



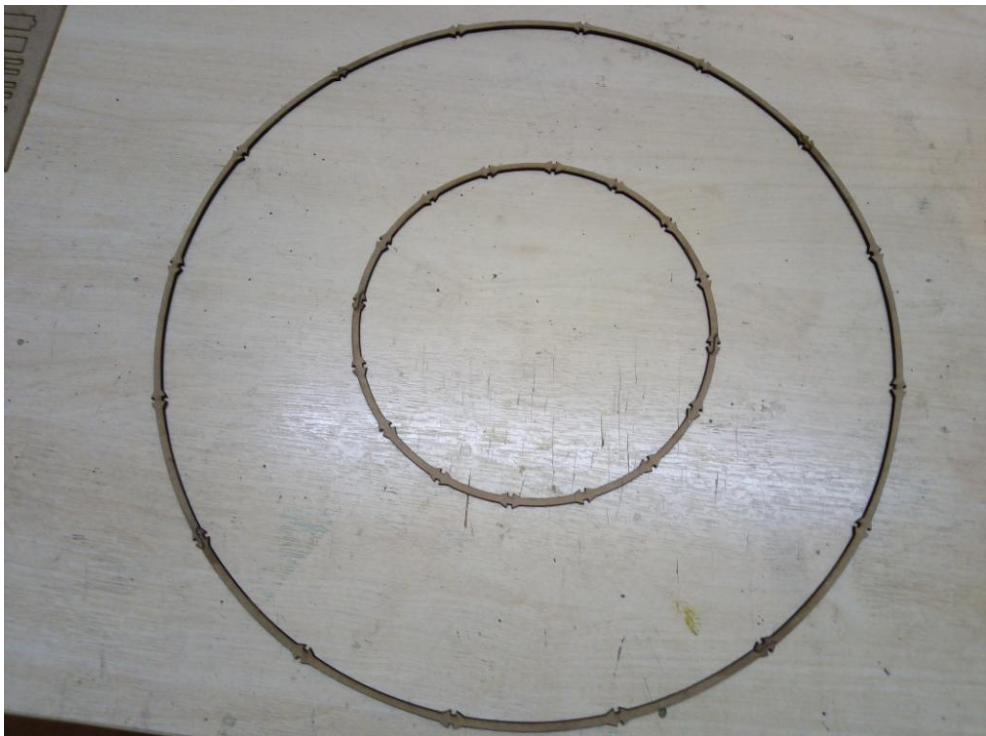
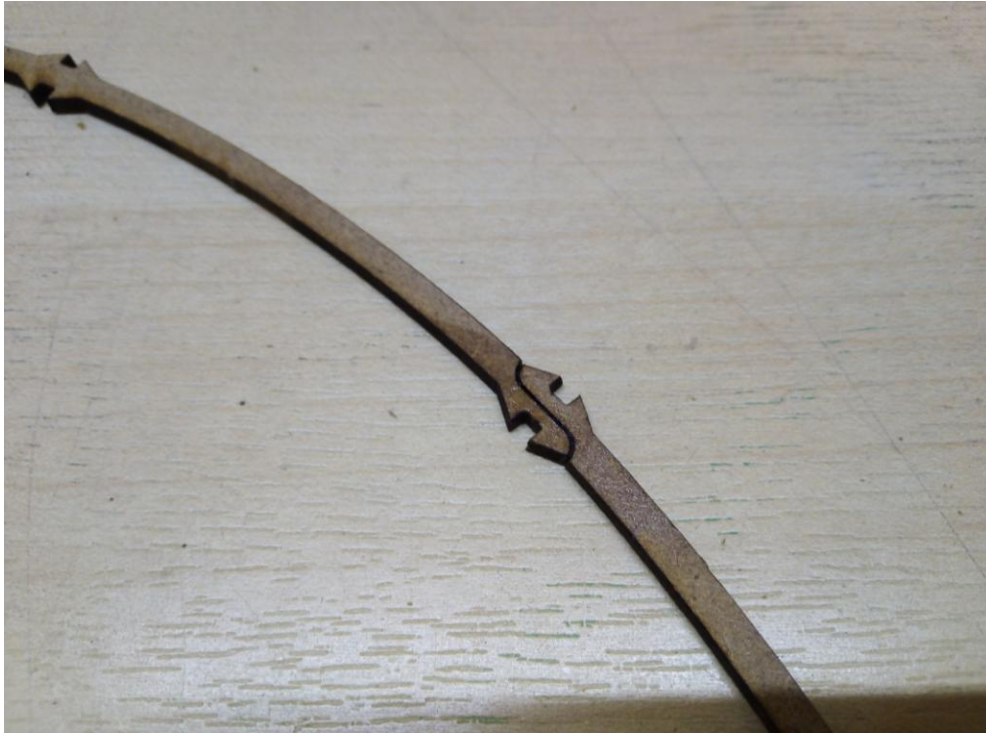
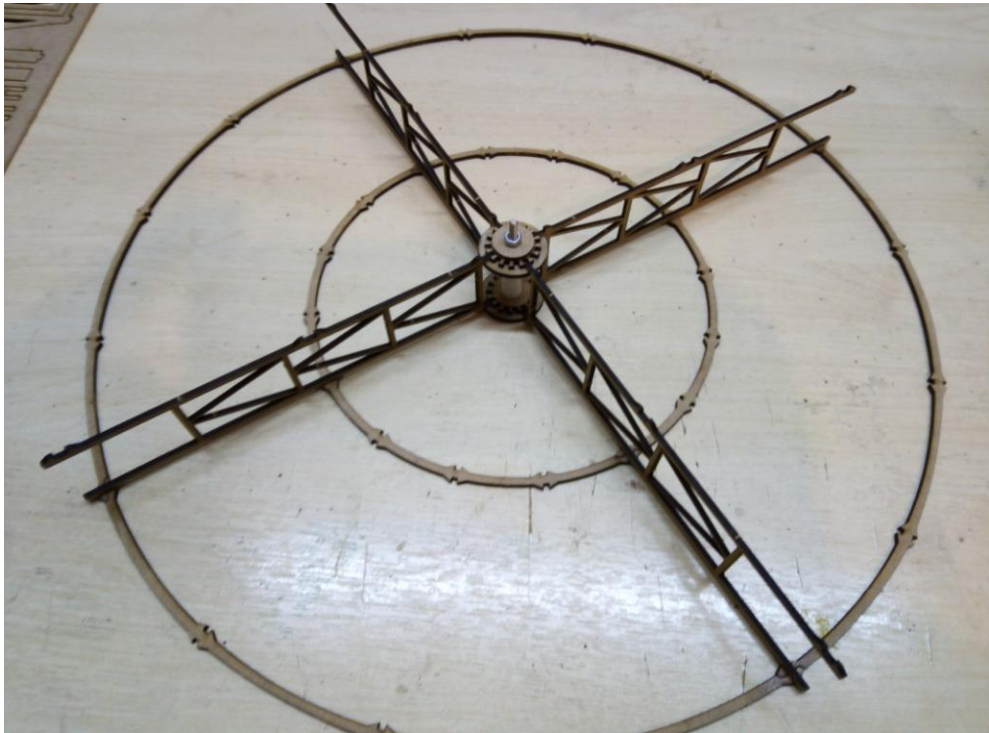



The design has changes slightly so photos are slightly different
but good as a guide

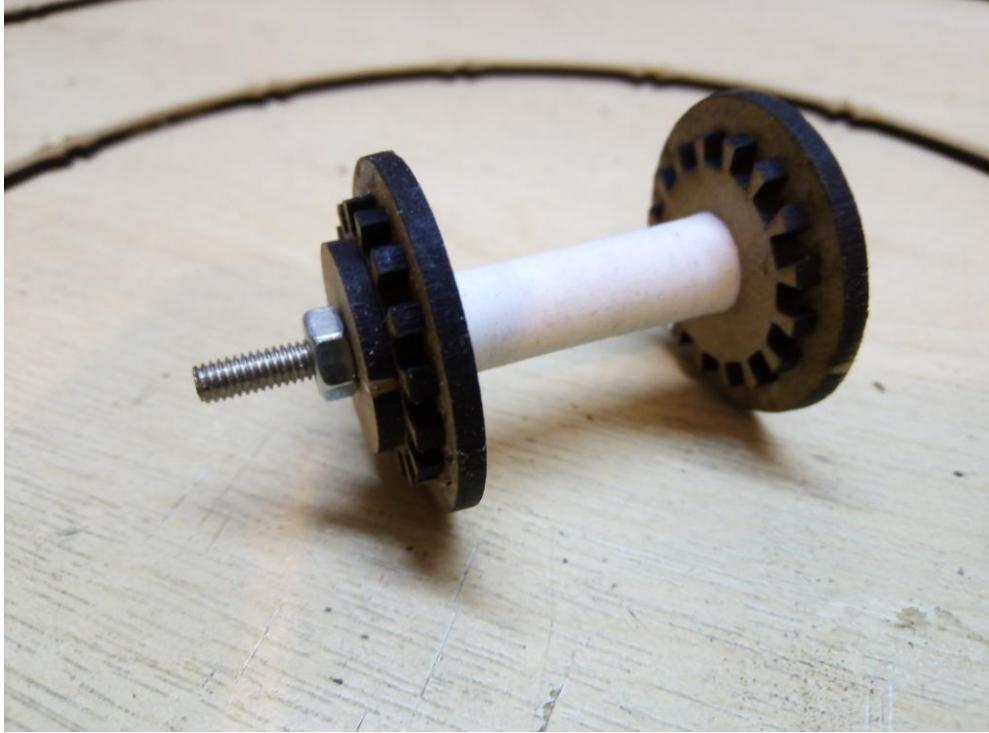


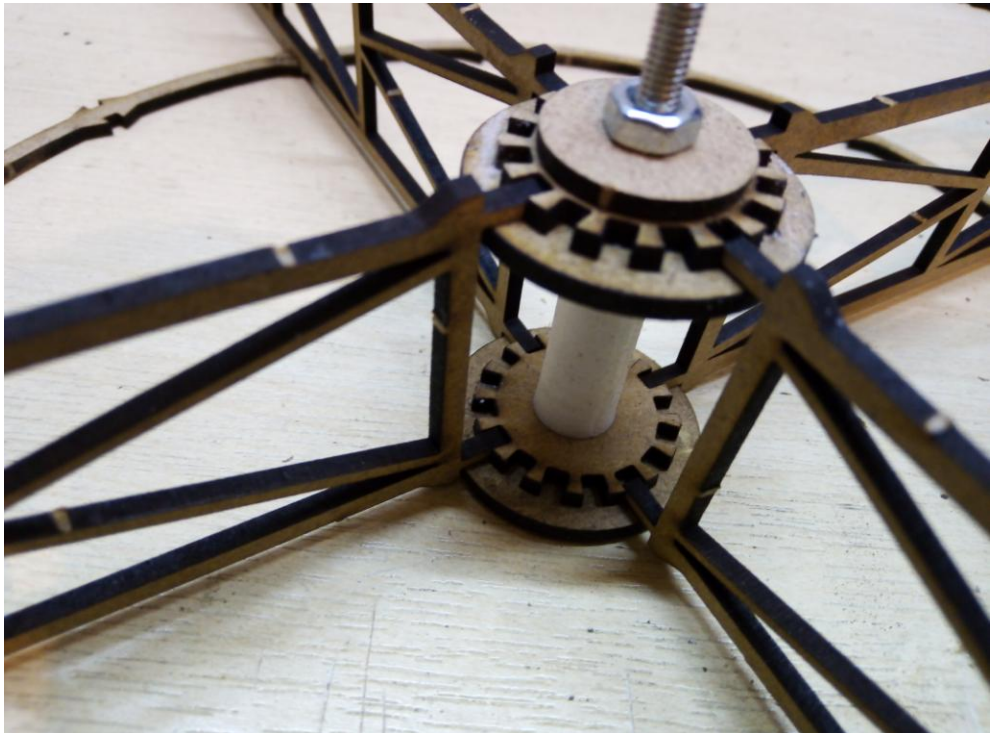


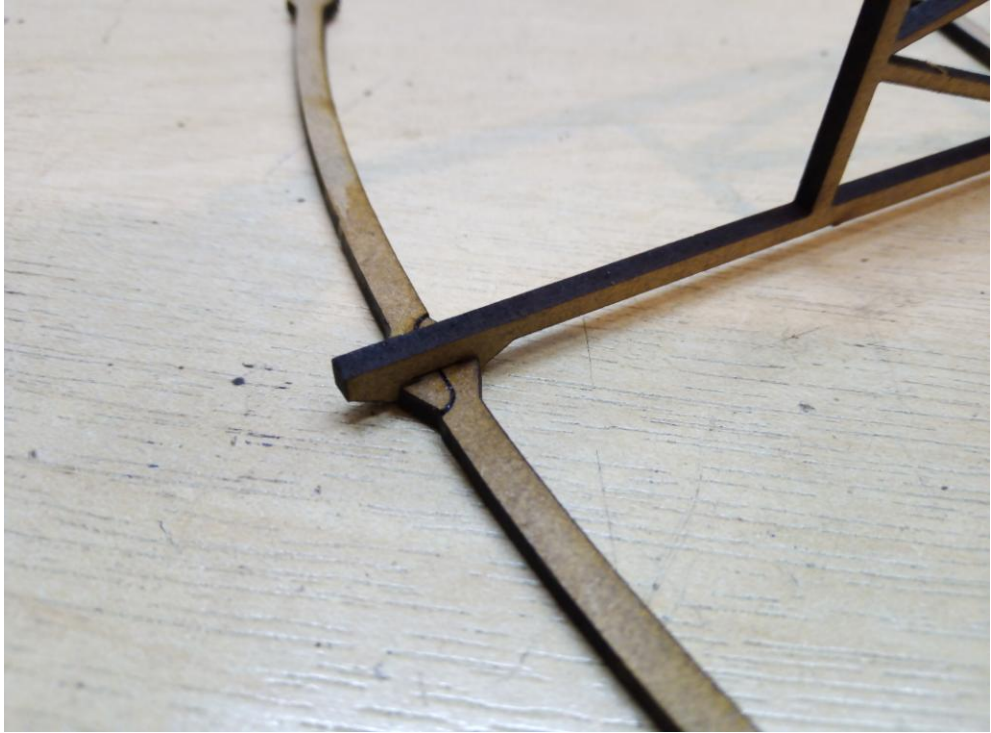

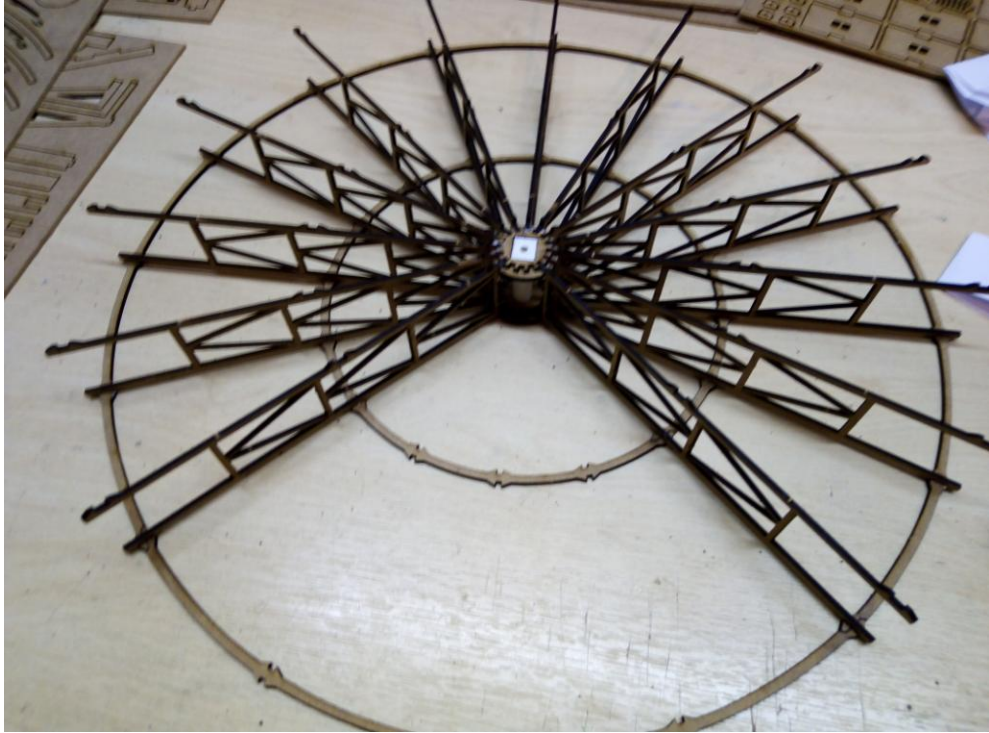

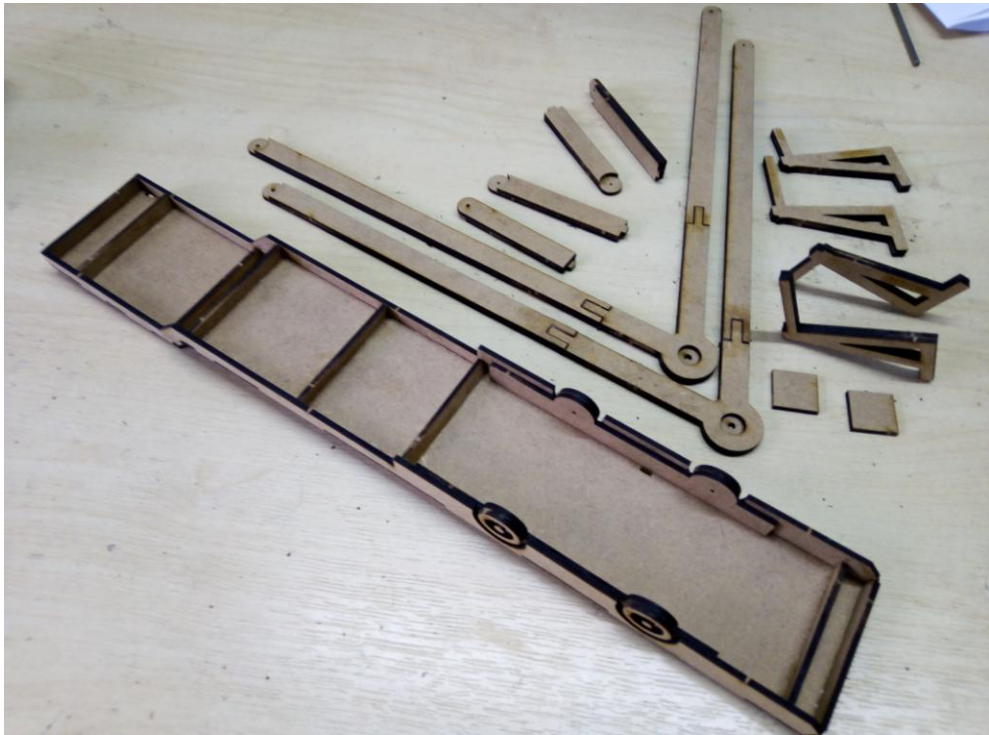

Keep uprights square using other parts as a 90 degree

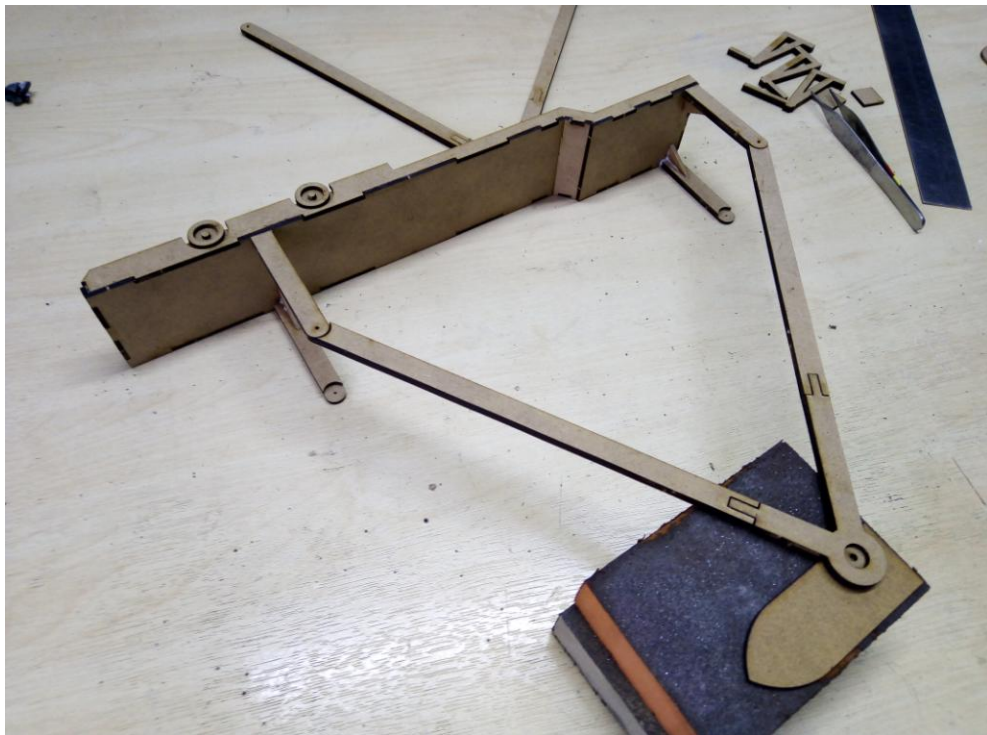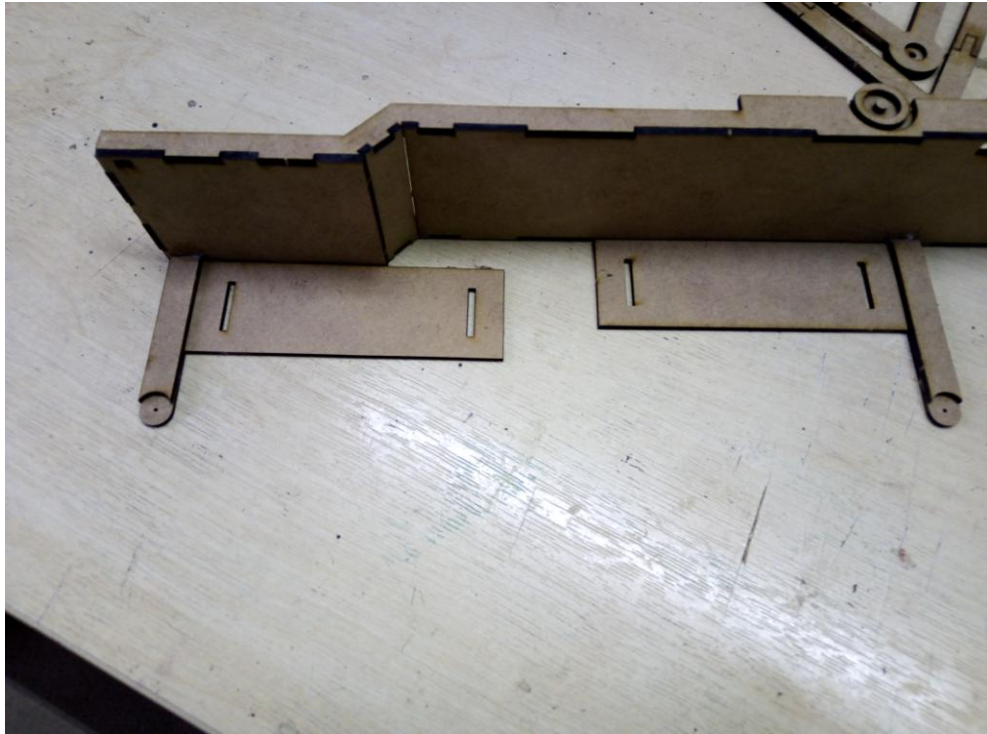





Test rotation with an old continuous rotation servo

Temporarily clamped on support

